




CHECK DAMS

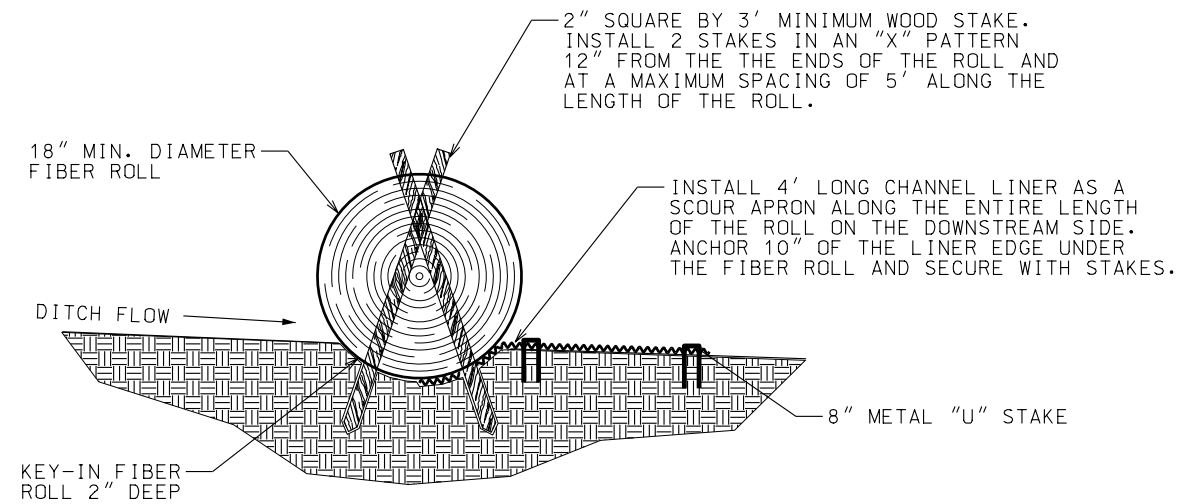


SECTION Y - Y

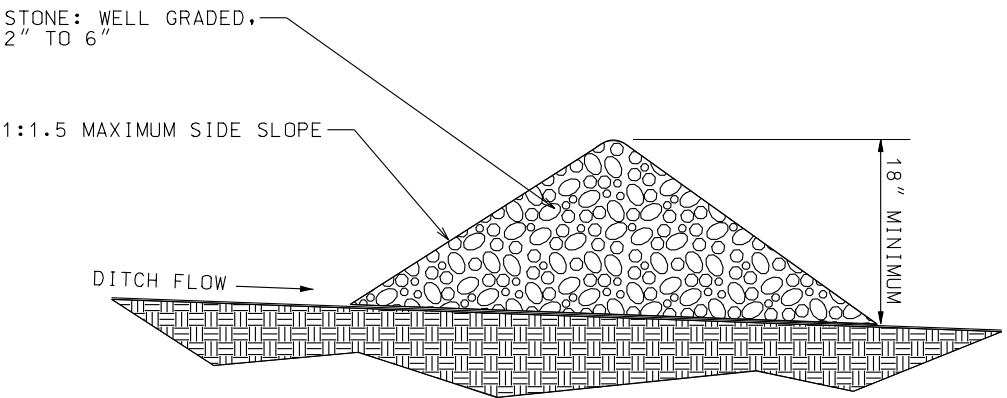

SECTION Z - Z

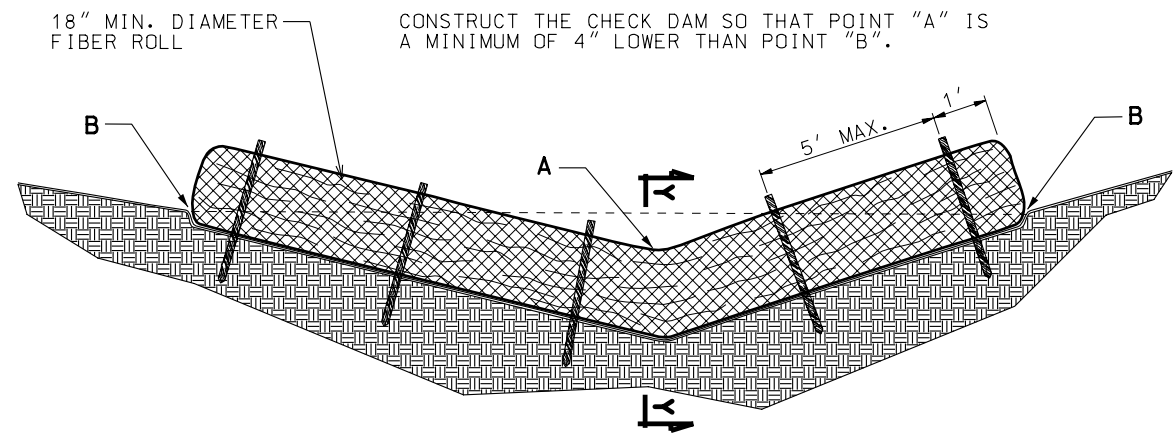

FIBER ROLL CHECK DAM

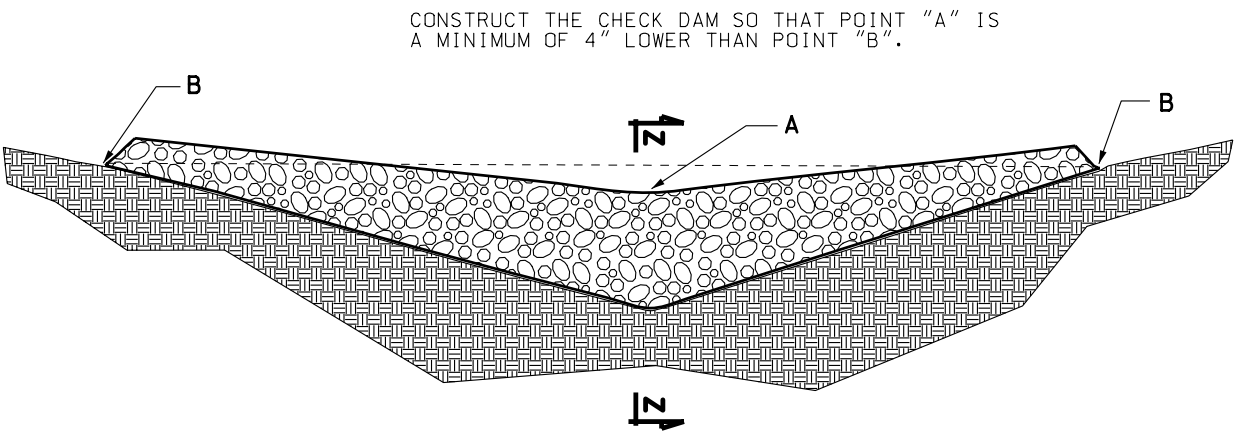

STONE CHECK DAM

MATERIAL QUANTITY CHART		
DITCH SIDE SLOPE	LENGTH OF FIBER ROLL REQUIRED FOR HALF OF DITCH	CUBIC YARDS OF STONE REQUIRED FOR HALF OF DITCH
2:1	4.5'	0.25
3:1	6'	0.35
4:1	8'	0.5
6:1	11.5'	0.7
8:1	15'	1.0
10:1	18.5'	1.2
12:1	22.5'	1.4

EXAMPLE: A CUT DITCH WITH A 6:1 FORE SLOPE AND A 2:1 BACK SLOPE WOULD REQUIRE A 16' MIN. FIBER ROLL OR 0.95 CUBIC YARDS MIN. OF STONE.

- NOTES FOR CHECK DAMS:
1. PLACE A CHECK DAM AT EVERY TWO-FOOT DROP IN ELEVATION ALONG THE CUT DITCH.
  2. A 9" TO 12" DIAMETER FIBER ROLL CAN BE USED IN PLACE OF THE 18" ROLL PROVIDED A ROLL IS INSTALLED AT EVERY ONE-FOOT DROP IN ELEVATION ALONG THE CUT DITCH.
  3. PLACE CHECK DAMS PERPENDICULAR TO THE FLOW LINE OF THE DITCH.
  4. DO NOT PLACE CHECK DAMS ACROSS NATURAL STREAM BEDS.
  5. DO NOT USE STONE CHECK DAMS WITHIN CLEAR ZONES.
  6. CONSTRUCT CHECK DAMS SO THAT WATER DOES NOT FLOW AROUND THE ENDS OF THE DAM.
  7. REMOVE SEDIMENT AS IT ACCUMULATES AND PLACE IT IN A STABLE AREA APPROVED BY THE ENGINEER.
  8. AFTER SURROUNDING AREAS HAVE BEEN SEEDED AND MULCHED, SPREAD ROCK FROM CHECK DAMS TO LINE THE CUT DITCH AND BREAK APART FIBER ROLLS AND SPREAD THE STRAW OVER SEEDED AREAS.

UTAH DEPARTMENT OF TRANSPORTATION  
STANDARD DRAWINGS FOR ROAD AND BRIDGE CONSTRUCTION

RECOMMENDED FOR APPROVAL  
CHAIRMAN STANDARDS COMMITTEE  
APPROVED  
DATE  
AUG. 25, 2005  
DEPUTY DIRECTOR

TEMPORARY  
EROSION CONTROL  
(CHECK DAMS)

STD DWG  
EN 1

REVISIONS  
1 08/25/05 T.J. REVISED ENTIRE DRAWING.

REMARKS

NO. DATE APPR.

DATE

STANDARD DRAWING TITLE